

## 10 Maintenance Schedule

Activity Description	Daily	Weekly	Monthly	Quarterly	Annually	As Required
Check for any fault lamps or signs of damage	X					
Inspect the condition of AHU washable filters		X				
Switch over the AHU washable filters, clean the dirty filters using a low pressure hosepipe only (no jet washing) from the inside of the filter to the outside. Warm soapy water and a light brush can be used on the frames, store to dry.						X
Replace Faulty Ionisation Tubes						X
Replace Fan Belts						X
Clean the inside of the AHU, Remove all dust, dirt and debris				X		
Remove each ionisation tube, test for functionality (replace if broken), remove the outer sheath from the tube, clean the glass with a wet wipe to remove dust, clean the outer sheath in warm soapy water before leaving to fully dry. Using a lint free cloth add a very thin layer of silicone grease to the glass tube. Reassemble the tube and reinstall to the ionisation unit				X		
Check the condition of the fan belts				X		
Clean the inlet eliminator blades				X		

## 11 Recommended Spares List

Item Description	Part Number	Quantity Installed	2 Year Quantity
IRF Ionisation Tubes	IRF	84	84
Supply Fan Belts	SPA2932	2	4
Wet Wipes	-	-	4
Silicone Grease	-	-	4
Lint Free Cloths	-	-	2
630mA Slow Blow Fuses	-	-	30

For additional component spares please consult the manufacturers manuals in section 4