

Annex G – updated method statement for ELV depollution and dismantling

This method statement is based on information provided by the operator. Steps A to P are performed for all vehicles. Steps Q to S are performed when the vehicle is not sent off as a depolluted vehicle, but is fully dismantled.

- A. Assess the vehicle for health and safety hazards.
- B. Clean Vehicle from rubbish/ waste left inside.
- C. Vehicle is then placed on the car lift
- D. De-gas air conditioning systems with specialist equipment.
- E. Battery is disconnected and removed.
- F. Tyres are removed from the vehicle.
- G. All electrical components are removed from the vehicle.
- H. Drain all petrol or diesel left in the vehicle using specialist equipment.
- I. Drain all engine and transmission oils.
- J. Drain brake fluid from brake lines and master cylinder.
- K. Drain power steering fluid.
- L. Drain antifreeze.
- M. Remove oil filter.
- N. Remove catalyst.
- O. Insert plugs in all drain holes.
- P. Remove all airbags.

- Q. Remove upholstery and plastic.
- R. Remove all glass
- S. Remove all non-ferrous material.